
ClearAccess™ Voter's Guide

Version 1.0



Clear Ballot

ClearAccess Voter's Guide

Part Number: 100056-10001
Copyright © 2015, Clear Ballot Group
All rights reserved.

This document contains proprietary and confidential information, consisting of trade secrets of a technical and/or commercial nature. The recipient may not share, copy, or reproduce its contents without express written permission from Clear Ballot Group.

Ballot Resolver, Clear Ballot Group, ClearAccess, ClearAudit, Clear Design, ClearCount, ClearData, ClearVote, Image-to-Ballot Traceability, MatchPoint, ScanServer, ScanStation, Speed Accuracy Transparency, Visual Verification, Visualization of Voter Intent, and Vote Visualization are trademarks of Clear Ballot Group.

ScandAll PRO is a trademark of FUJITSU LIMITED. All rights reserved.

Other product and company names mentioned herein are the property of their respective owners.

Clear Ballot Group
7 Water Street, Suite 700
Boston, MA 02109
(857) 250-4957
<http://www.clearballot.com>

Document history

Date	Description	Version	Authors
	Initial release.	1.0	Nel Finberg

Table of contents

Preface	4
Audience and scope	4
Using this guide	4
Notation conventions	5
Contact us	5
Chapter 1. Voter Cards	6

Preface

ClearAccess™ is an accessible voting and ballot marking application that allows voters with sight or mobility limitations to vote in an unassisted manner. The software runs on a touchscreen computer installed with an EZ Access keypad and Origin Sip-and-Puff device. The voter may make ballot selections either by touching the monitor, pressing buttons on the keypad, or using the Sip-and-Puff. Ballot selections may be presented on the computer's display, played back over audio headphones, or presented both on the screen and in audio format. Once the voter has finished voting, selections are printed to a paper ballot.

Election and ballot information recognized by ClearAccess is configured in the ClearDesign™ software. This information is programmed to a unique set of election media (typically a USB stick) for every voting location, then installed on the respective ClearAccess unit.



ClearAccess is fully accessible, allowing disabled voters to configure, navigate and vote the ballot in an unassisted manner.



ClearAccess is used to vote and mark ballots with voter selections, but is not used to count, tally or report race or candidate totals.

Audience and scope

This guide provides voters with concise visual instructions for voting using ClearAccess.

Using this guide


The guide contains the following topics.

[Chapter 1. Voter Cards](#)

This chapter includes pull-out voter instruction cards for voting using the touchscreen, the Origin Sip-and-Puff, and the touchscreen with the EZ Access keypad.

Notation conventions

The following conventions are used in this manual:

Convention	Purpose
Bold	Denotes clickable selections on web pages and dialogs.
<i>Italics</i>	Denotes placeholders for user-defined values.
Monofont	Denotes product keywords and system commands.
	Indicates noteworthy information.

Contact us

Clear Ballot Group welcomes your feedback on our documentation. Please send your comments to Documentation@ClearBallot.com.

Chapter 1. Voter Cards

This chapter contains the following single page Voter Card pullouts:

- [Voting using the Touchscreen](#)
- [Voting using the Sip-and-Puff and Touchscreen](#)
- [Voting using the keypad and Touchscreen](#)

Voting the Touchscreen Ballot

Contest Screen

Touch **Settings** for:
Magnification
Color/Contrast
Audio ballot playback
Visual ballot display

Touch **Help** for:
Voter Instructions

Touch **Candidate Box** to select

Touch **Write-in** Candidate to enter Write-in and prompt keypad display

Touch **Back** to skip to previous contest

Touch **Cancel** to Cancel the Ballot

Touch **Review Votes** to view the Ballot Review Screen

Touch **Next** to go to next contest

Write-In Screen

Write-in a name for Secretary of State

Use this screen to vote for a person who is not on the ballot.

To finish, touch Accept. If you change your mind, touch Cancel

Type the Write-In Candidate Name and then touch Accept

Review Screen

Review what you're voting for

This screen shows everything you voted for. To continue voting touch the Back button below.

 
Touch to see more contests

Touch the contest to return to the contest screen and vote or edit choice

Scroll down to view more contests

Touch **Print** to print ballot

Voting the Sip-and-Puff and Touchscreen Ballot

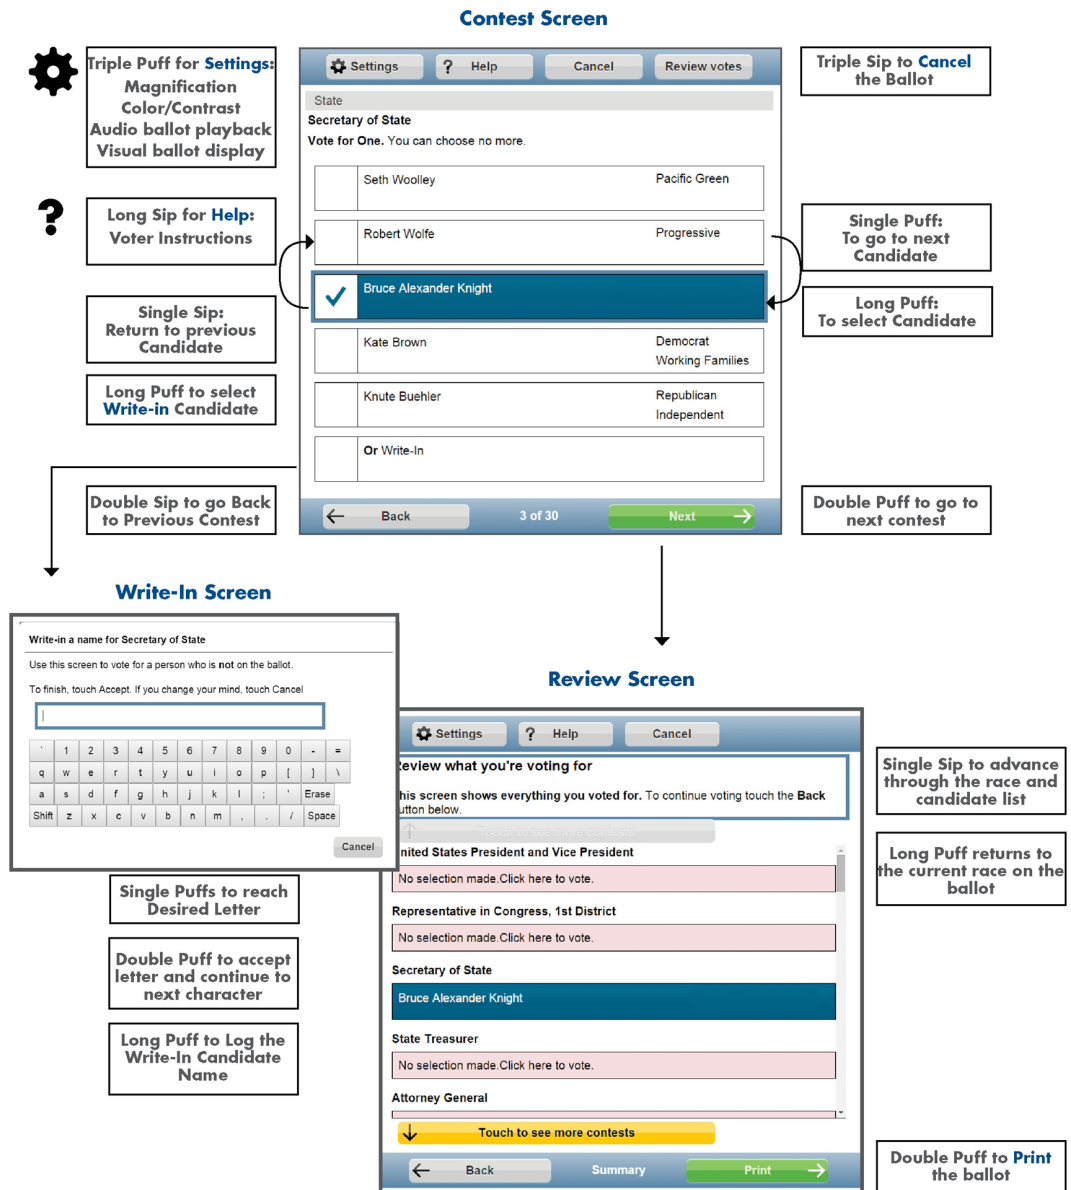

Voting the Keypad and Touchscreen Ballot

Contest Screen

Press for: Magnification Color/Contrast Audio ballot playback Visual ballot display

Press for: Voter Instructions

Press up arrow for previous candidate and down for next candidate

Press to Enter a Write-In Candidate

Press to skip to previous race Press for one second to **Cancel**

Press to skip to next race Press for one second to **Review Votes**

Press to Select Candidate

Write-In Screen

Write-in a name for Secretary of State

Use this screen to vote for a person who is not on the ballot. To finish, touch Accept. If you change your mind, touch Cancel

Press to reach a desired letter

Press to accept letter and continue to next character

Press to log Write-in Candidate Name

Review Screen

Press to scroll and review votes

Press to return to current contest

Press to **Print** Ballot

Contest Screen Details:

- Buttons: Settings, Help, Cancel, Review votes
- State: Secretary of State
- Vote for One. You can choose no more.
- Candidates: Seth Woolley (Pacific Green), Robert Wolfe (Progressive), Bruce Alexander Knight (Selected), Kate Brown (Democrat Working Families), Knute Buehler (Republican Independent), Or Write-In
- Bottom: Back, 3 of 30, Next

Write-In Screen Details:

- Buttons: Cancel
- Keyboard: 1-0, ., =, QWERTYUIOP, ASDFGHJKL, Shift ZXCVBNM, / Space

Review Screen Details:

- Buttons: Back, Summary, Print
- Contests:
 - United States President and Vice President: No selection made. Click here to vote.
 - Representative in Congress, 1st District: No selection made. Click here to vote.
 - Secretary of State: Bruce Alexander Knight
 - State Treasurer: No selection made. Click here to vote.
 - Attorney General: No selection made. Click here to vote.
- Bottom: Back, Summary, Print

